





der möbelexperte

www.mbx.bg

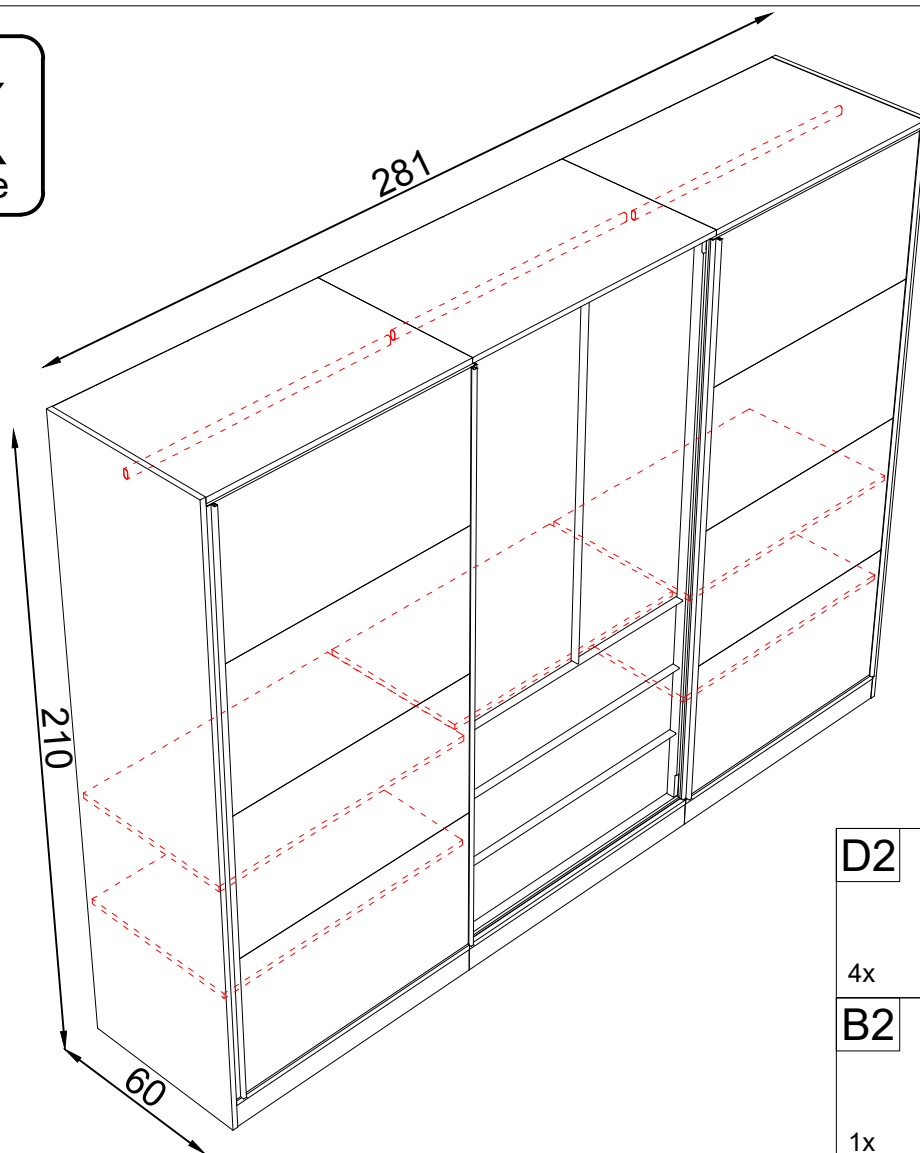


C2

4x



A2


2x

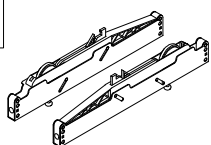

V


1x

3x

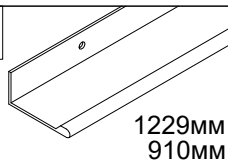


W

4x

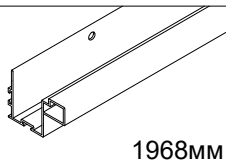


X

2x

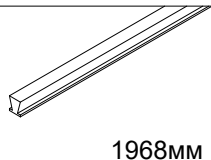

Y

4x

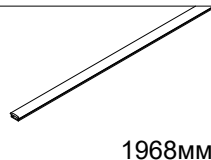

D2

4x




B2

1x




Q

6x

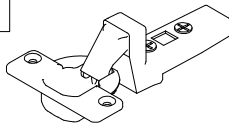


R

8x



S

8x




T

6x




U

3x

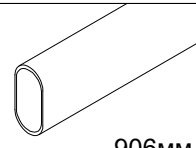


K

3x




L

16x




M

8x

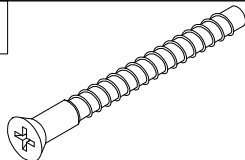


O

20x

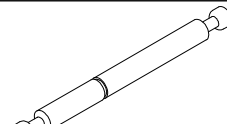

P

6x




F

9x



G


137x



H


2x

3x

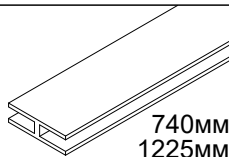


I

250x

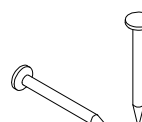


J

3x

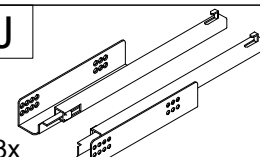


A

88x

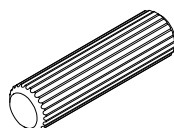


B

48x

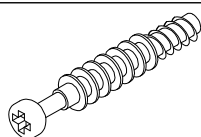

C

88x



D

46x



E

12x



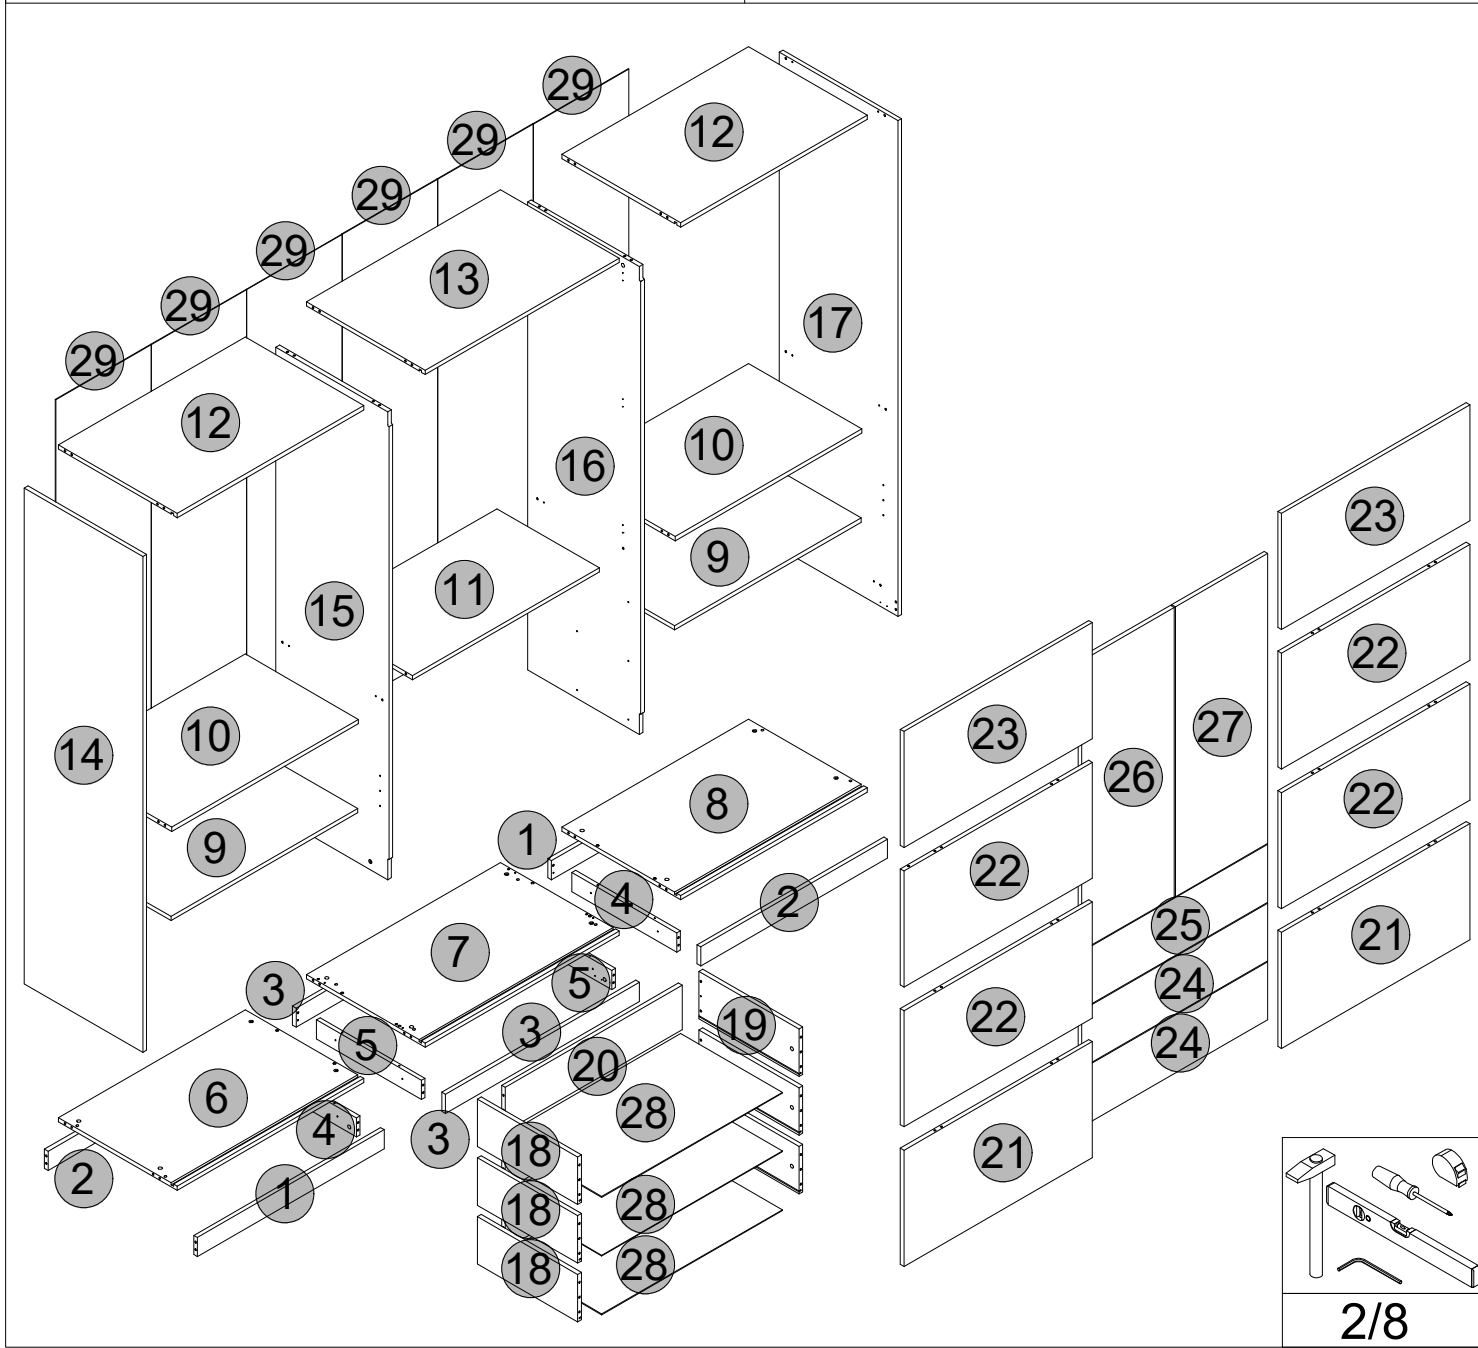
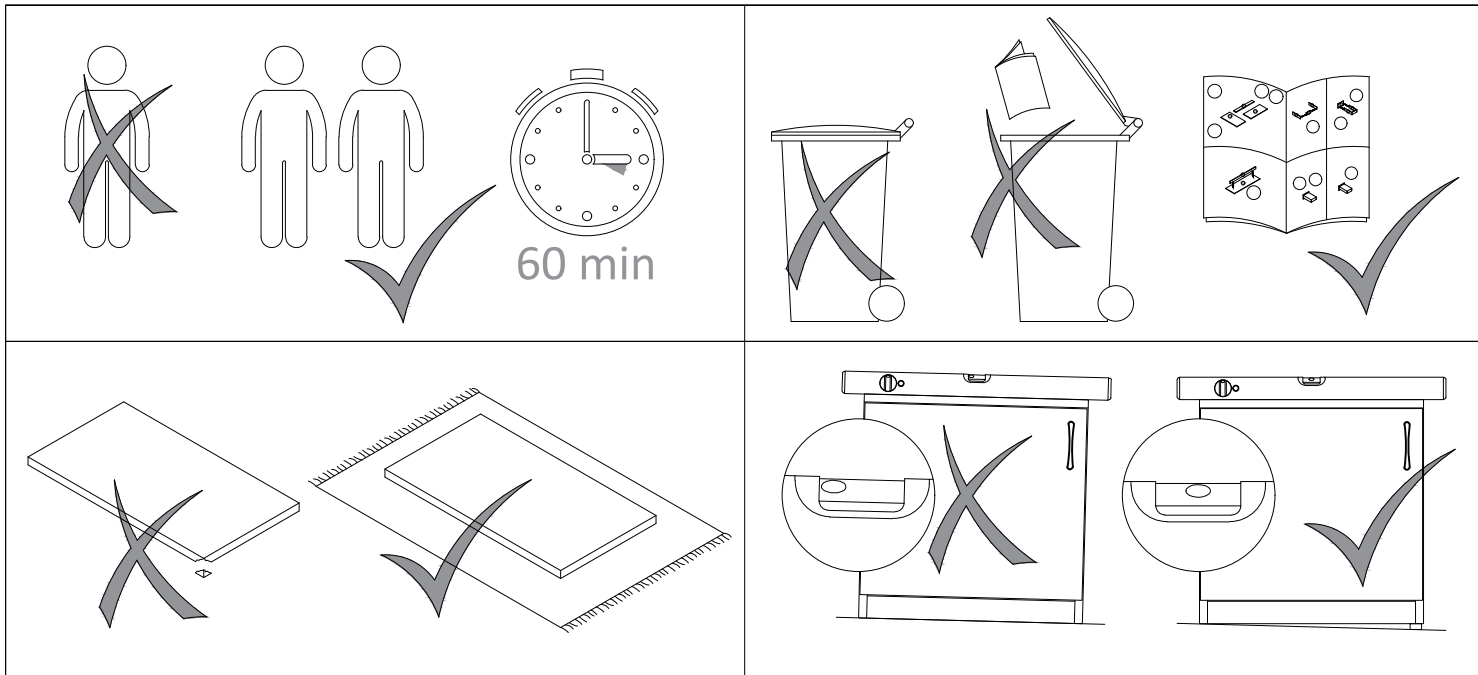


Diagram 3 shows the assembly of the side panel (24) to the front panel (18) and the back panel (19). The side panel (24) is shown being attached to the front panel (18) and the back panel (19) using screws. Arrows indicate the direction of assembly.


4

18


28

3/8


5

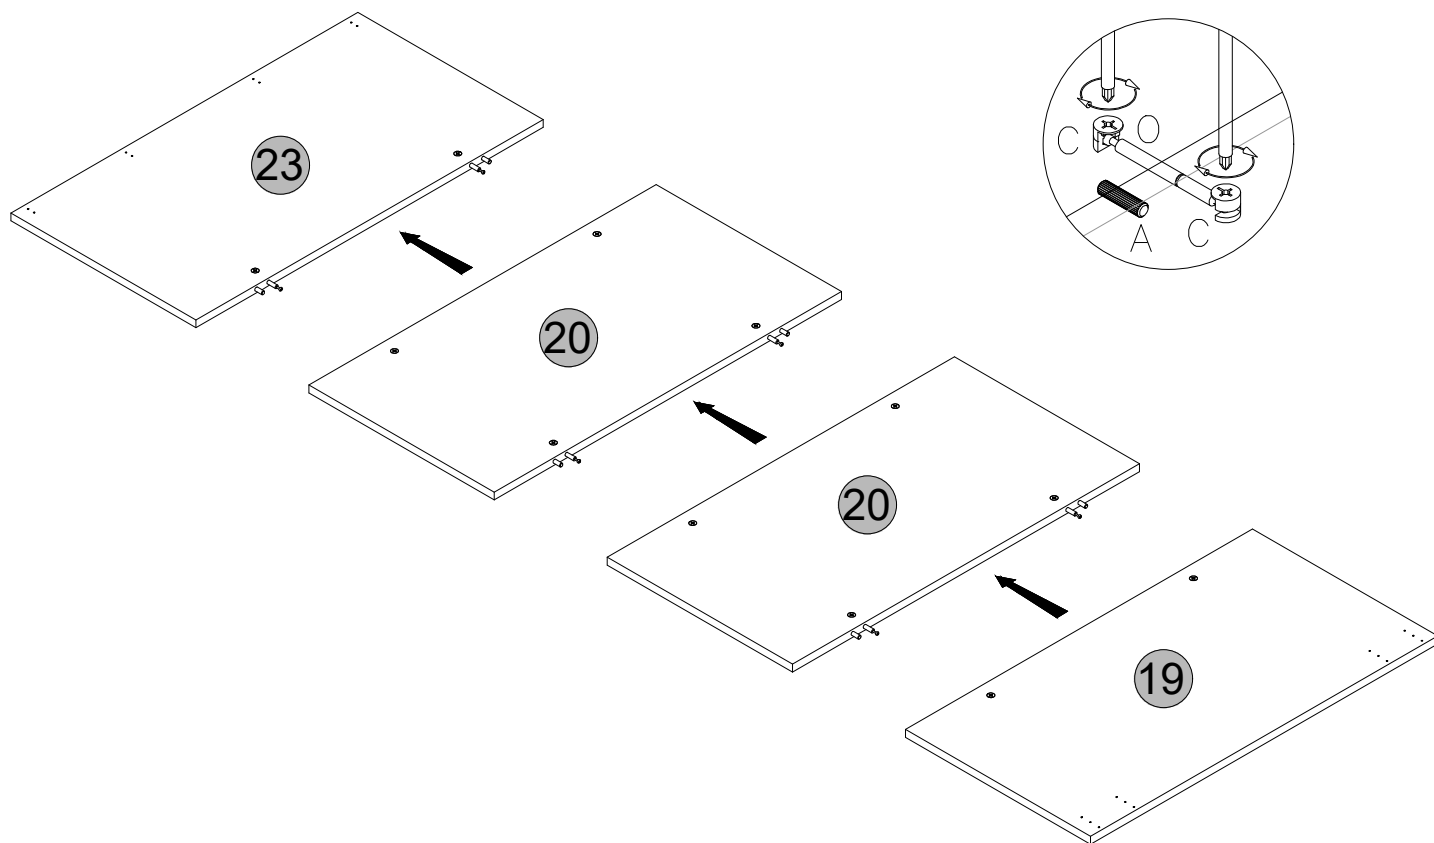



6

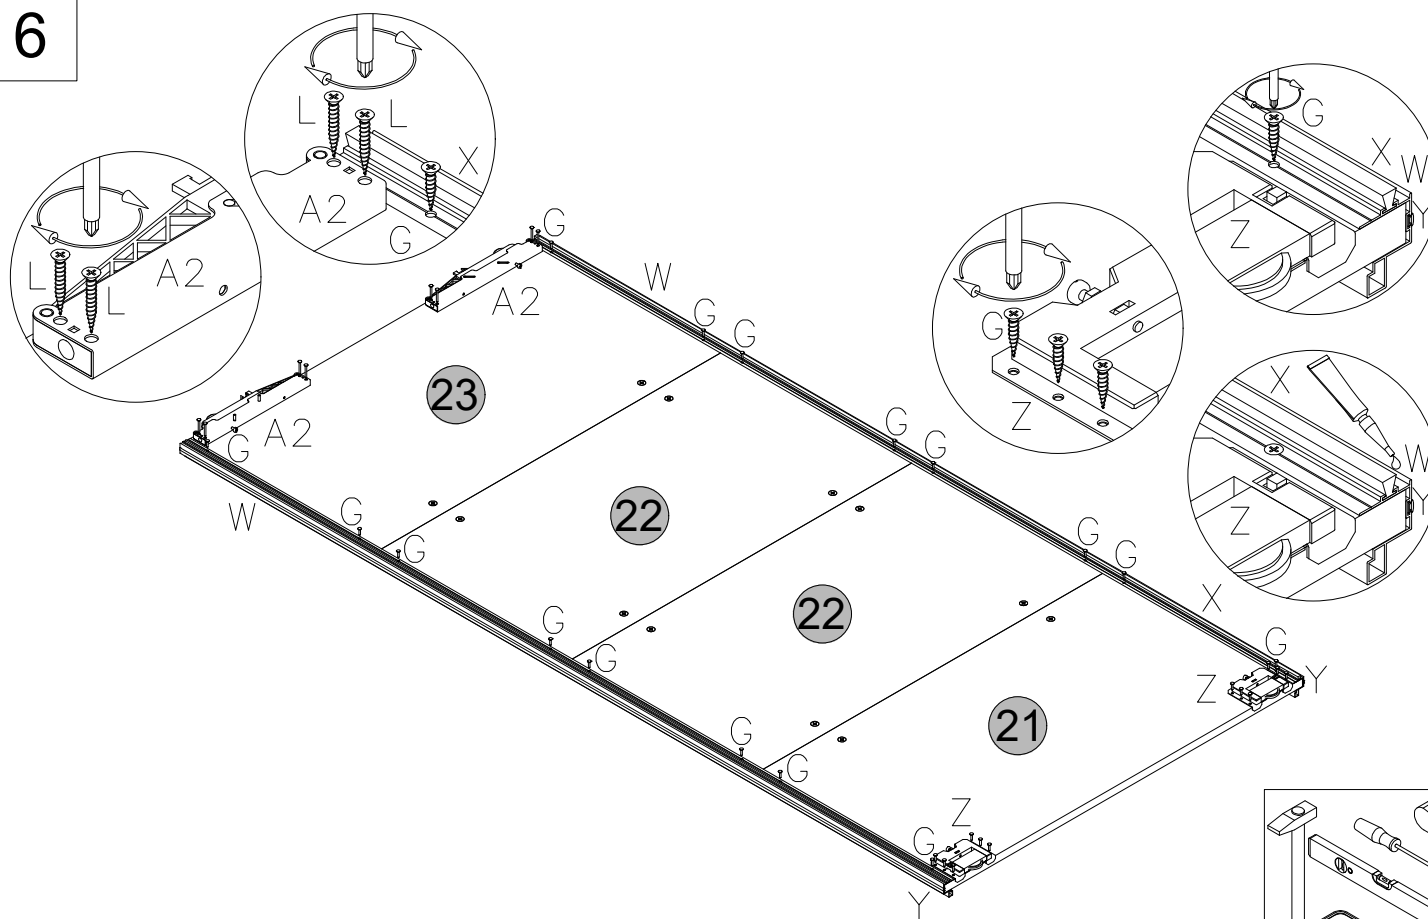



7

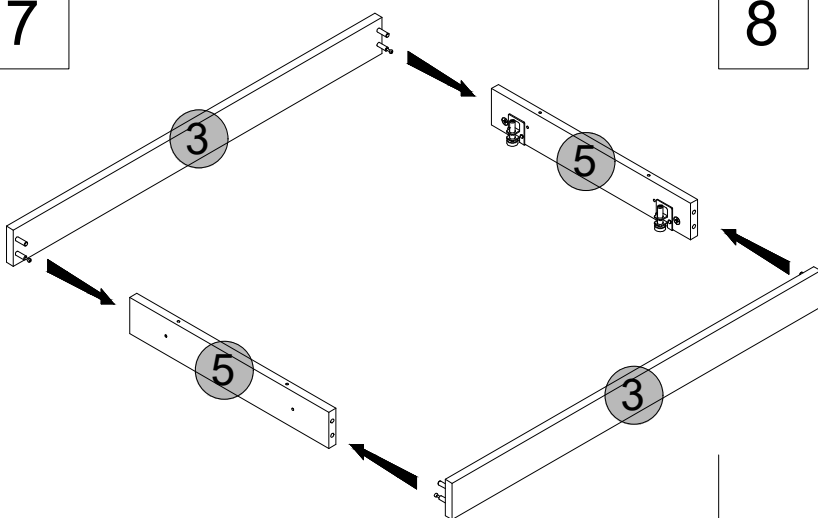

8

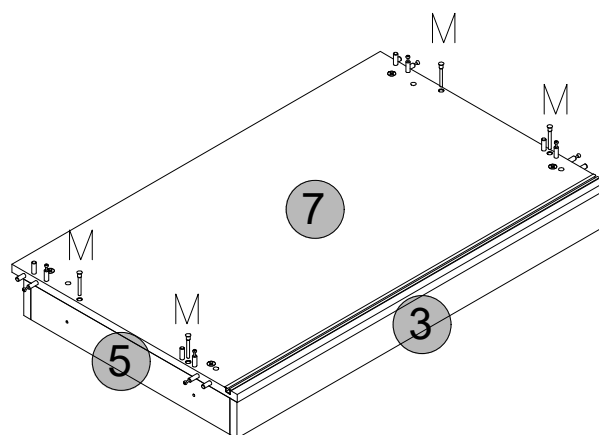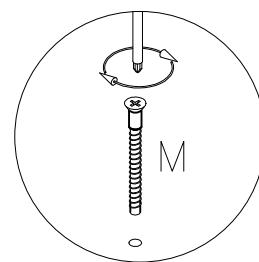





9

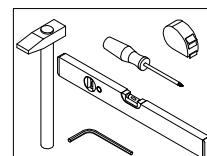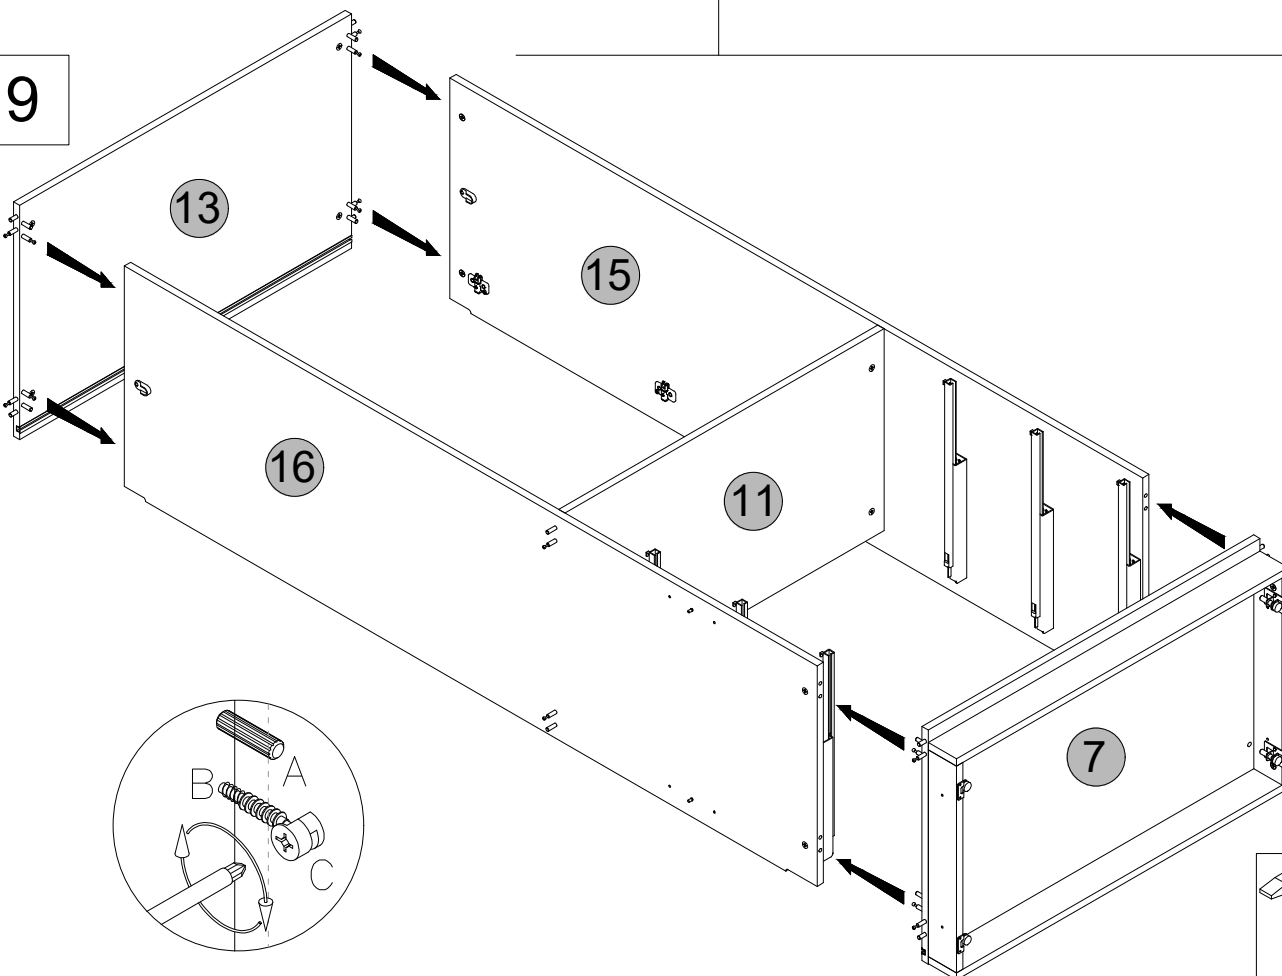








5/8

10

11

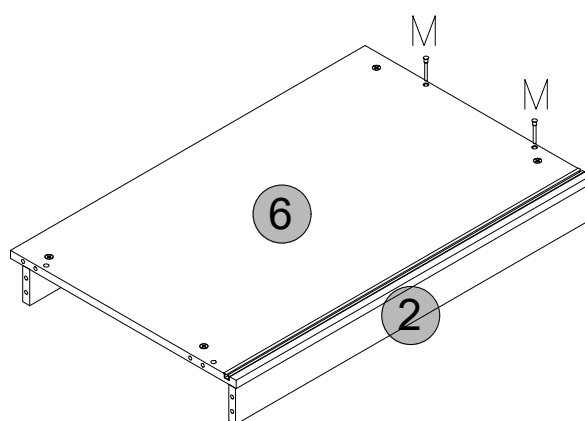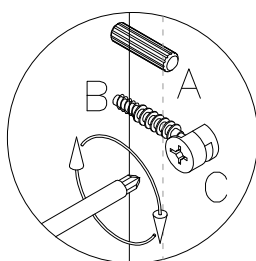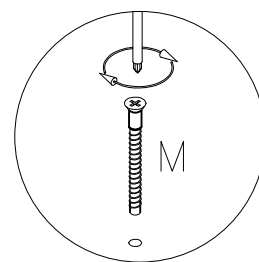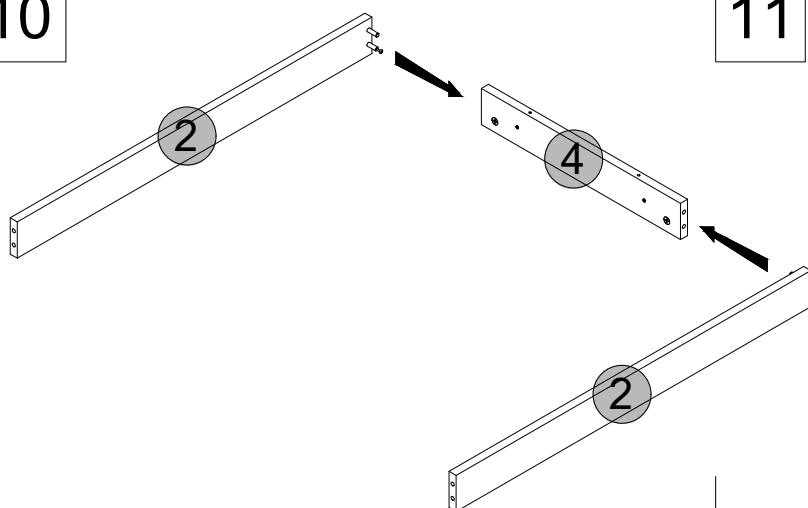


12

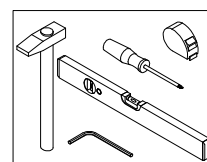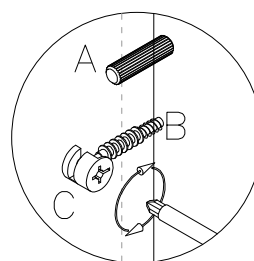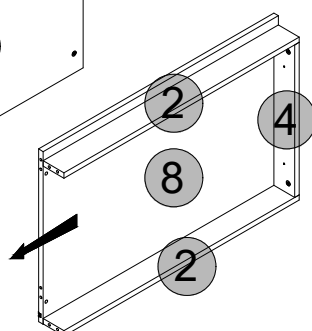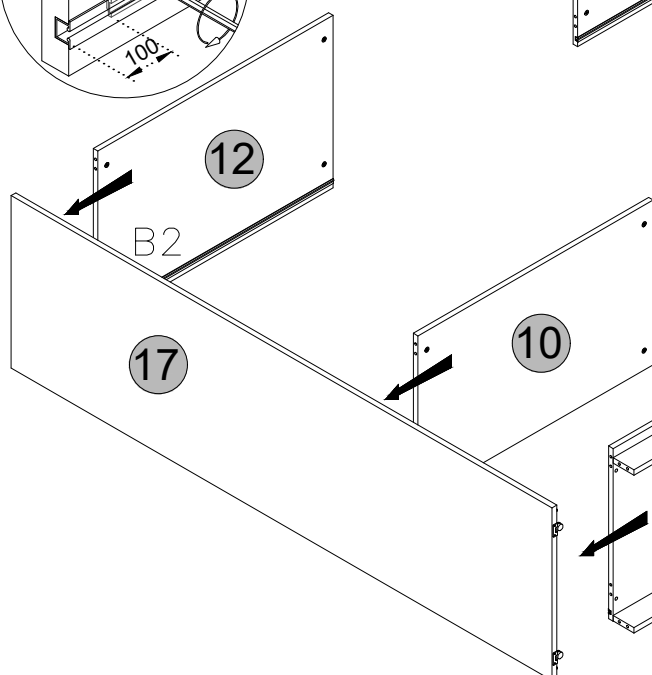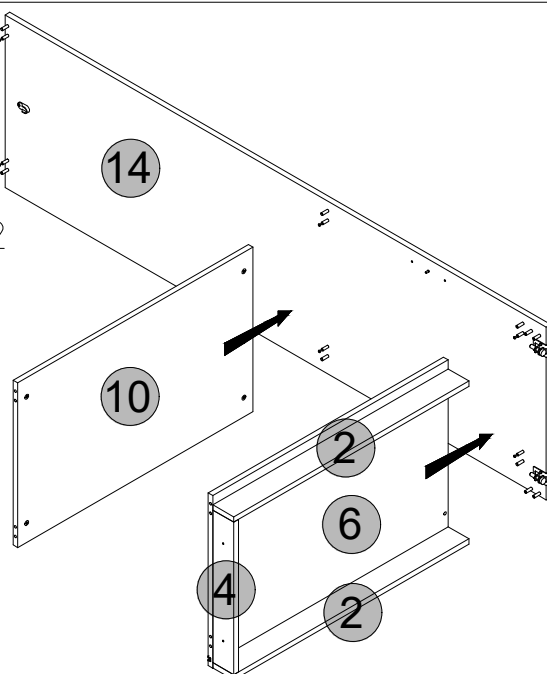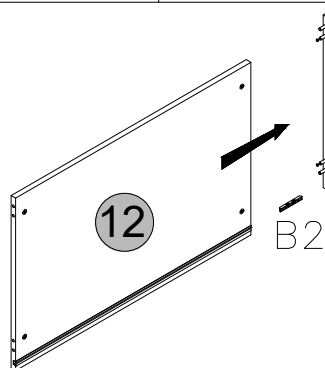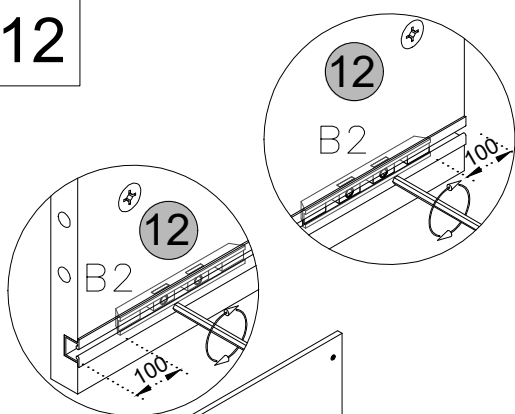



6/8

13

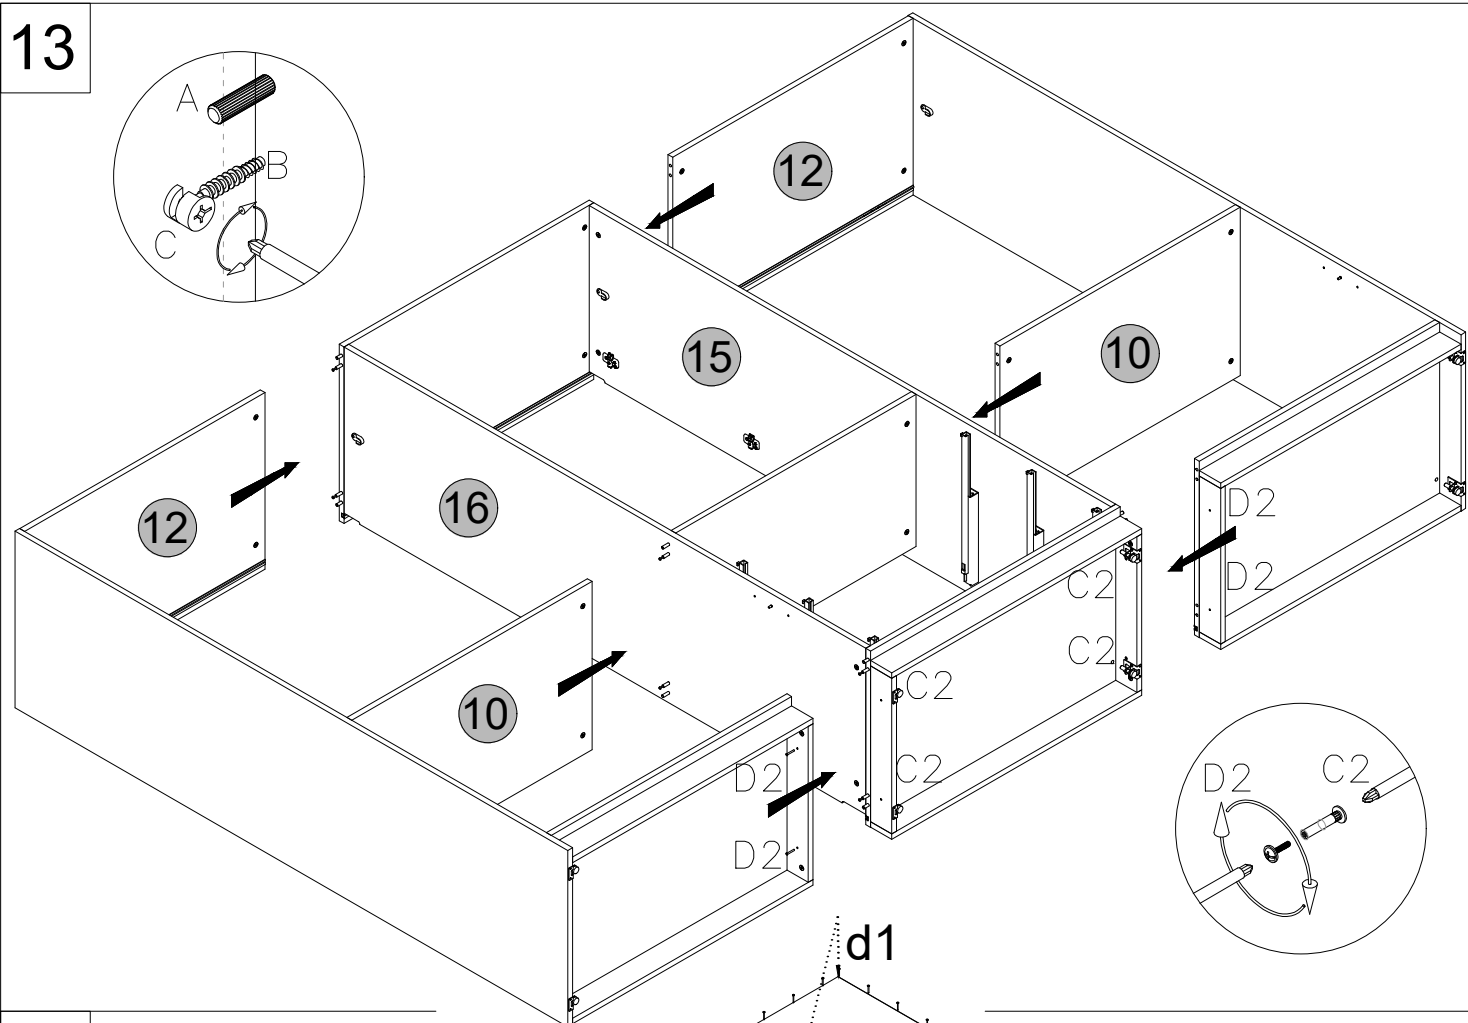

14

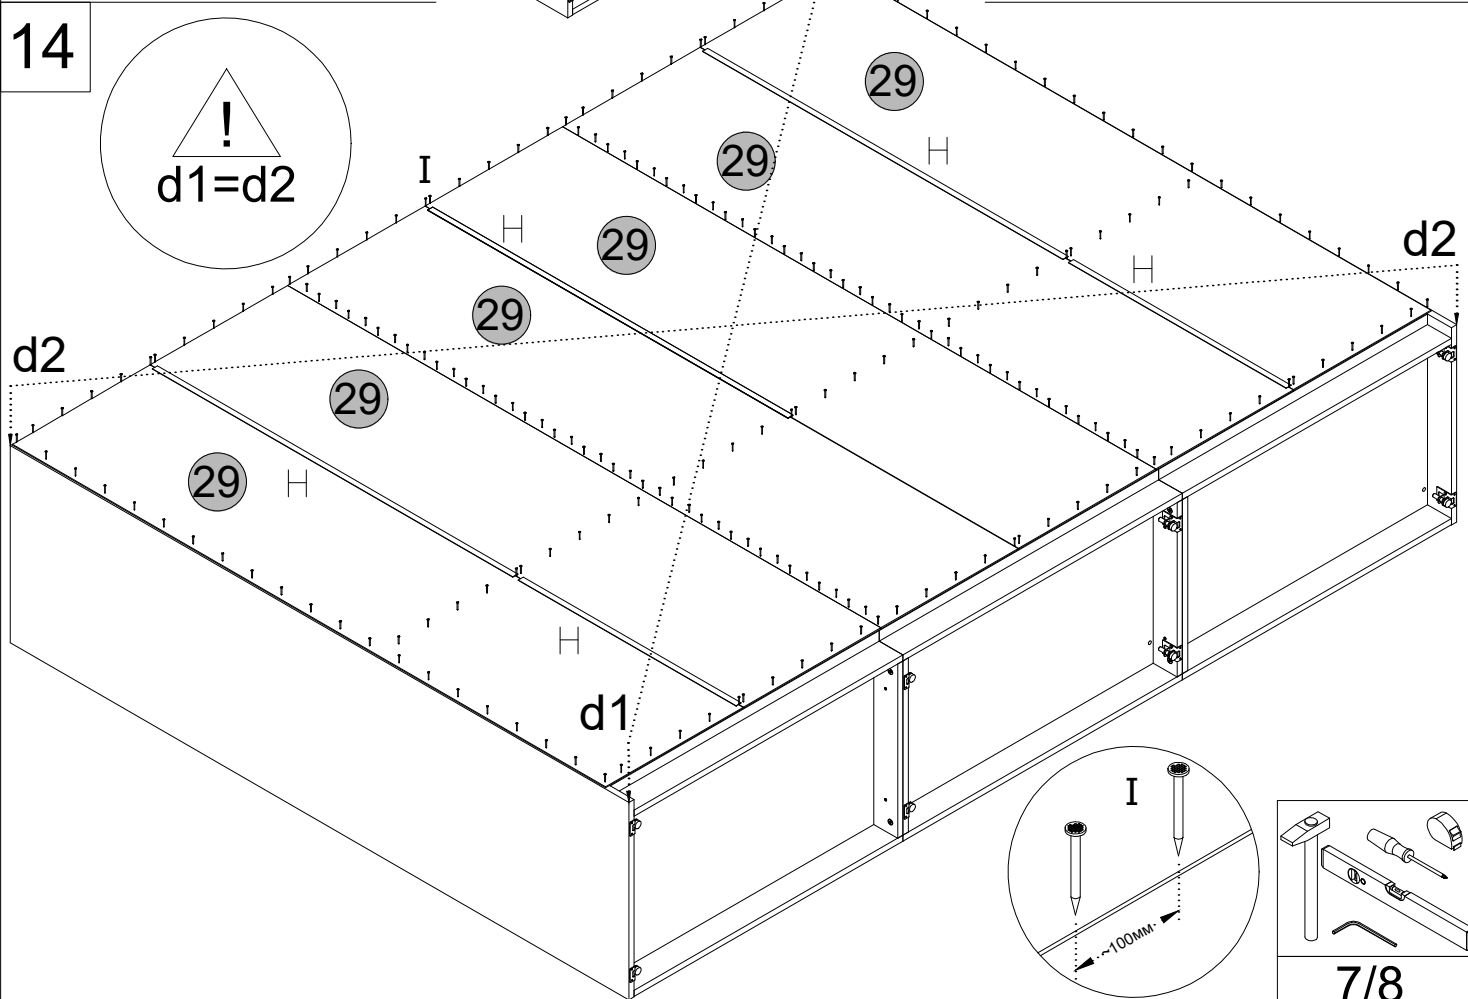

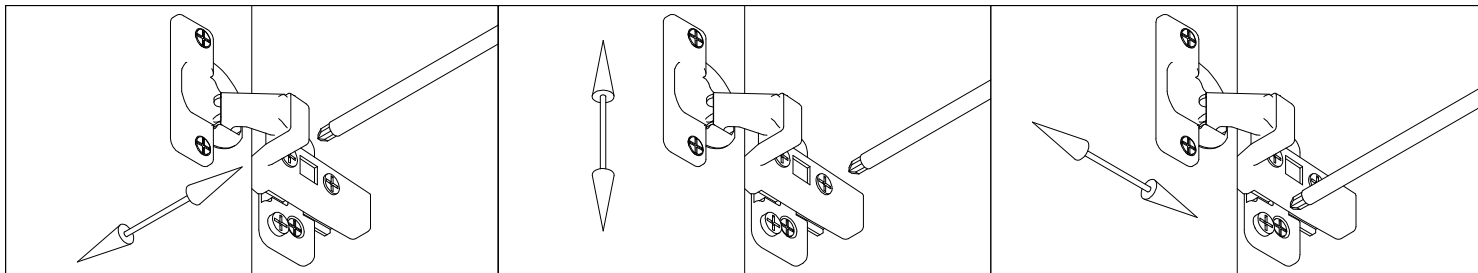

15

